

INTERNAL GAIN ADJUSTMENT

Dirty Shirley

Adjusting Gain:

The Friedman DIRTY SHIRLEY has an internal trim pot preset to 10 O'clock (middle) which adjusts the overall gain of the pedal. To increase or decrease the overall gain, please follow these instructions:

1. Use a small philips screwdriver to remove the bottom cover.
2. Using a small flat head screwdriver turn the trim pot counter clockwise to achieve less overall gain or clockwise to achieve higher overall gain.
3. Re-install the bottom cover and enjoy the Friedman DIRTY SHIRLEY.

